



# Hardware Manual

VDH-DRG858

2019 FEB. V1.0

---

## Contents

---

A. CAUTION .....	1
B. Introduction .....	2
1. Product Overview .....	2
2. Main functions .....	2
C. Unpacking .....	3
1. Accessories .....	3
2. Unpacking .....	3
D. Installation .....	3
E. Product appearance .....	4
1. Front Panel .....	4
2. Rear Panel .....	5
3. Installation Illustration .....	6
Video input .....	6
Connections for video outputs .....	6
Audio Inputs .....	7
Audio Output .....	7
RS-485 connection .....	7
F. Q & A and Maintenance .....	8
1. Q & A .....	8
2. Maintenance .....	12
G. Appendix : Specifications .....	13

## A. CAUTION

To our dear customers!

Thank you for using our products. If you encounter any problems when using, please do not hesitate to contact our resellers. We will provide excellent services to you via our resellers.

The software/hardware improvements of this series are subject to change without notice to you in advance. Before using, please read this user manual carefully to ensure that you can use the device correctly and safely

Caution for this DVR series

- After installation, never put anything heavy over this device. Owing to the use of the hard drive(s) inside this device, check the cooling fan periodically to see if it works. Never use this device when the cooling function is out of order!
- Do not allow any solid object or liquid fall into or penetrate into the device.
- Use cleaning tools (brushes) regularly to clean circuit boards, connectors, fans, chassis, etc. Before cleaning, turn off the power and unplug the power.
- Do not attempt to disassemble the equipment, repair, or replace parts. In case the machine does not work properly, please contact the resellers or manufacturers. In the shortest time, we will solve the problems you have during using.
- When not using the remote control for a long time, take out the inside battery To prevent the control from the damage coming from battery leakage!

If this equipment connects to outdoor cameras or, ground this equipment to prevent it from electrical surges.

- This DVR supports remote video monitoring via internet. Free or non-free domain names provided by ISPs are needed for the monitoring functions. Free domain names may sometimes have problems and nothing to do with DVR. Non-free domain names have less problems. Choose the domain names carefully before using the networking function.

Operating environment

- Keep and use this device at places where temperature ranges 0°C~40°C. Avoid direct sunlight or near heat sources.
- Do not install this equipment in a humid environment
- Do not expose this equipment in smoky, dusty environments;
- Avoid strong collision, do not drop the machine
- Keep the installation level, install in a stable place, avoid the product falling;
- Do not block any ventilation openings. And ensure well ventilation around the machine
- Please use this equipment within rated input and output current/voltage range.
- This device is for long-time use. For safety, do not have flammable items placed next to the device.

## B. Introduction

### 1. Product Overview

This equipment is an excellent digital surveillance product designed specifically for the security use. Using embedded LINUX operating system, it makes the system more stable. Using standard H.265 video compression and G.711A audio compression technology achieves audio and video functions such as high-quality, low bit rate and single-frame playback. Using TCP / IP and other network technologies, it provides strong network data transmission capacity and remote control capabilities.

This equipment can be used individually or be connected to form a powerful security monitoring network. Using professional network video surveillance software platform, be fully experienced the powerful networking and remote monitoring capabilities.

This equipment can be used for security in banks, telecommunications, power stations, justice, transport, intelligence communities, factories, warehouses, resources, water conservancy facilities and other categories.

### 2. Main functions

- Pentaplex Operation: which can Record / Playback / Remote Connection / mobile phone watch / video backup
- Support 1 fixed internal Hard Drives, single hard drive can be up to 6TB.
- Support HD output
- Support real-time recording and playback
- Smart function: Motion detection area can be divided into (16x12) sub-areas.
- Support IE. On-line recording/playback and user management are available.
- Support HTTP, DHCP, DDNS, NTP, SMTP, FTP, DNS, UPNP, PPPoE, IP rights, IP search and other Internet services
- Support iPhone, Android including live video monitoring, playback.
- Support CMS(Central Management System)
- Back-up to USB storage at the same time when recording
- Support analog/digital modes to record analog/digital signals at the same time(unavailable for certain model)

## C. Unpacking

### 1. Accessories

- ★ Power cable and adaptor AC100-240V/DC12V 3A x 1PCS
- ★ HDD screws x 4pcs
- ★ Mouse x 1pcs

### 2. Unpacking

When you receive the product, check first whether the packing of the equipment has obvious damage. The protective material used for the package during transport can cope with most of the accidental impact;

Then, take out the device, remove the protective film of the digital video recorder and check if there is any visible damage;

Finally, open the case, check the front panel data cable, power cord, power supply fan and motherboard to see if they are connected firmly.

#### ■ Front/Rare panels

The key functions of the front panel and the interfaces of the rear panel are described in detail in the manual.

Please carefully check the plate or foil on the rear panel of the product to see if it is the model you ordered.

Information on the rear panel is important for our service, so keep it properly. Before contacting us, you will need to provide your model type and serial number.

#### ■ Inside check

In addition to checking for visible signs of damage, be careful to check the connections between the front panel data cable, power cord and motherboard.


## D. Installation

Steps and cautions:

- 1 ∙ Ensure room temperature below 35°C
- 2 ∙ Reserve space for air circulation around 15 cm (6 inches).
- 3 ∙ Chassis installation starts from bottom to up
- 4 ∙ With multiple components in the chassis, take precautions to avoid overloading to the power outlet.

## E. Product appearance

### 1. Front Panel

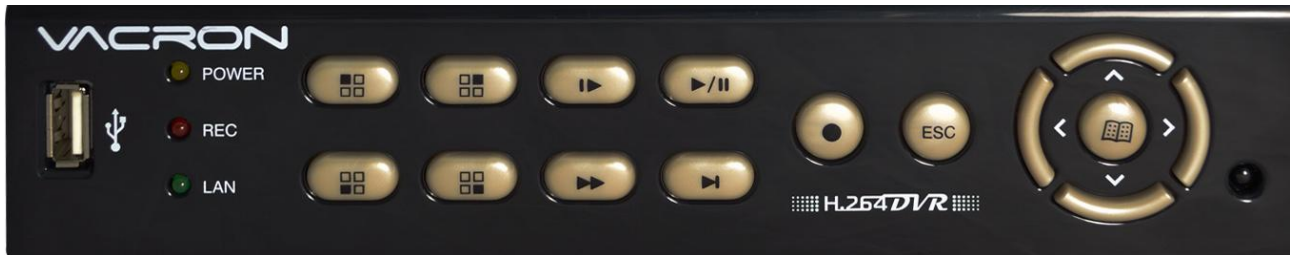


ESC	ESC	Exit the current menu.
	REC	Under the live mode, press the REC button to enter recording menu.
	Step Forward	To playback frame by frame when paused in playback mode. ( Press Pause before operation )
	Play Pause	Under the live viewing mode, press the Play button to enter the playback mode and backup mode. Under the playback mode, press to play back. When playing, press to pause playback.
	Fast Forward	Under the playback mode, there are 4 choices for the speed. Choose your choice to forward.
	Slow Forward	Under the playback mode, there are 4 choices for the speed. Choose your choice to forward.
	UP DOWN	To move up or down of the selection setting in the UI menu. Under the live mode of Single/Quad/8/9 display, use the button to control video display.
	LEFT RIGHT	To move left or right of the selection setting in the UI menu. Under the living mode, change to Single/Quad/8/9 division display.
	Menu	Under the live viewing mode, press MENU to enter the main menu.
	Preview CH1/5	Preview CH1/CH5. Press this button to switch CH1/CH5.
	Preview CH2/6	Preview CH2/CH6. Press this button to switch CH2/CH6.
	Preview CH3/7	Preview CH3/CH7. Press this button to switch CH3/CH7.
	Preview CH4/8	Preview CH4/CH8. Press this button to switch CH4/CH8.
POWER 	Power Indicator	Power Indicator
REC 	Recording Indicator	Recording Indicator
LAN 	LAN Indicator	LAN Indicator (When users use network functions, it will be turned on.)

2. Rear Panel  
8ch DVR illustration



1	1~8 CH Video Input (BNC)
2	Video Output (BNC)
3	Audio Output (BNC)
4	HD digital output
5	VGA output
6	Audio Input
7	LAN Port
8	USB
9	RS-485 PORT
12	DC12V Power Input

- RS-485 port/DC12V Power Input

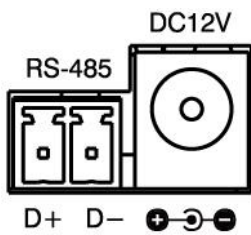

### 3. Installation Illustration



#### ■ Video input

Input interface is BVC type; input signal is PAL/NTSC BNC ( 1.0VP-P · 75Ω ). The Video signal should comply with national standards, a higher signal to noise ratio, low distortion, low-interference; clear images, no deformation, nature color and appropriate brightness.

#### ◆ Make sure stable and reliable signals from cameras

Cameras should be installed in a suitable position to avoid backlighting, low-light environment, or adopts the better BLC, low-light cameras. Cameras and digital video recorders should be common ground, stably and reliably, in order to ensure the normal operation of the cameras.

#### ◆ Make sure the transmission cables are stable and reliable

Adopt high-quality, well-shielded coaxial cables, and choose the right model based on the transmission distance. If the distance is too far, use shielded twisted pair, video compensation equipment, optical transmission and other ways to ensure signal quality based on the specific circumstances. Video cable should avoid strong electromagnetic interference with other devices and circuits, in particular, should avoid the current of high voltage.

Cables and shielded cable should be well-connected firmly to avoid false, joint welding or oxidation.

#### ■ Connections for video outputs

The video outputs include PAL/NTSC BNC(1.0VP-P · 75Ω), VGA and HDMI interfaces.

Pay attention to the following when you select a PC display instead of a monitor.

1. Do not remain switched on for a long time to extend the life of the equipment;
2. Regular degaussing will help to maintain the normal operation of the monitor.



3. Keep away from equipment with strong electromagnetic interference. Using TV as video output device is an unreliable alternative. It is also required to minimize the time of use and strictly control the power, the interference caused by neighboring devices. Leakage risks of low quality TVs may result in damage to other equipments.

■ Audio Inputs

Voice input impedance is high, so the microphone must be a microphone connected to the power supply.

Like video input, voice transmission cables should avoid interference, fake, poor contact, and special attention to prevent the current of the high-voltage.

■ Audio Output

The audio output parameters of DVR are generally greater than 200mv 1K $\Omega$  (BNC), you can directly connect to the low impedance headphones, powered speakers or other sound devices through a power amplifier.

When the external speakers and microphones cannot achieve spatial segregation, it is prone to the phenomenon of whistling.

You may adopt following actions:

1. Using better directional microphones
2. Adjust the speaker volume to make it lower than the value of the generated howling.
3. Using sound-absorbing materials for decoration to reduce sound reflections and improve the acoustic environment;
4. Adjusting the layout of the microphone and speakers can reduce the whistling.

■ RS-485 connection

1. Connect RS-485 cable of the speed dome to the RS-485 interface of DVR, pay attention to the positive and negative signals.
2. Connect the video output cable of the speed dome to the DVR video input

## F. Q & A and Maintenance

### 1. Q & A

Q 1. After power on, DVR doesn't work.

A: The possible causes:

1. Wrong power input
2. bad connection of power cable
3. Power error
4. Firmware update error
5. Disk error or cable problem
6. Front panel error
7. Main PCB board error

Q 2. After power-on, DVR will restart after several minutes or the screen freezes.

A: The possible causes:

1. Unstable or low input voltage
2. The hard drive has bad sectors or cable error
3. Low adaptor power
4. Front video signal not stable
5. High temperature, too much dust and the machine runs in a bad condition.
6. DVR hardware error

Q 3. HDD not found after power-on

A : The possible causes:

1. No power for the Hard Drive
2. Hard Drive cable error
3. Hard Disk error
4. Main board SATA slot error

Q 4. No output: Single, multiple or all channels

A : The possible causes:

1. Wrong firmware: Update to the right firmware
2. Brightness set to 0: set it to the default value
3. No signal input or signal too weak
4. Mask used
5. DVR hardware error

Q 5. Live video problems: Such as bad colors, brightness error, image blink...

A : The possible causes:

1. When using BNC as output, wrong NTSC/PAL matching will result in B/W image.
2. Impedance mismatch between digital video recorder and monitor.
3. Video transmission distance is too far or video transmission line attenuation is too much.

---

#### 4. Wrong settings of colors, brightness in the DVR

Q 6. No recorded file in local side

A : The possible causes:

1. Wrong data cable or jumper error in the hard disk
2. Hard Disk error
3. Upgraded firmware cannot recognize the existing file system
4. Desired files are overwritten
5. Recording not enabled

Q 7. Bad image when playback

A : The possible causes:

1. Low recording quality
2. Once data error when reading or small bit-rate or fuzzy when playback, please reboot machine
3. Wrong data cable or jumper error in the hard disk
4. Hard Disk error
5. DVR hardware error

Q 8. No audio sound

A : The possible causes:

1. Not powered-microphone
2. Not powered-speaker
3. Audio cable error
4. DVR hardware error

Q 9. Live video with audio, but no sound when playback

A : The possible causes:

1. Wrong setting: audio not enabled
2. No video to the paired channels; when the screen is blue, playback will be choppy.

Q 10. Wrong time

A : The possible causes:

1. Wrong settings
2. Bad battery connection or low voltage
3. Bad frequency oscillator

Q 11. DVR can not control PTZ

A : The possible causes:

1. PTZ error
2. Wrong settings, cabling and installation for the PTZ
3. Wrong wiring
4. Wrong PTZ settings in the DVR side
5. Protocols mismatch between PTZ and DVR

6. Mismatch between PTZ decoder and DVR ID address
7. When connected to several decoders, the farthest AB line of PTZ decoder must add a 120 ohm resistor to eliminate reflection and impedance matching, otherwise it will make PTZ unstable.
8. Distance beyond limitation

Q 12. Motion detection not function

A : The possible causes:

1. Wrong schedule setting
2. Wrong area setting
3. Low sensitivity
4. Hardware limitation for different version

Q 13. Fail to login by using client software or Web browsers

A : The possible causes:

1. Operating system is Win98 or Win Me and the client software cannot be installed or displayed normally; Upgrade the operating system to Win2000sp4 or above, or use lower versions of the client software.
2. ActiveX control blocked; install the ActiveX control in the attached CD.
3. DX8.1 or above not installed; upgrade the display driver.
4. Networking error
5. Wrong Networking settings
6. Wrong user/password
7. Wrong client software for the DVR firmware

Q 14. Mosaic or no video when Network preview and file playback

A : The possible causes:

1. Network traffic jam
2. Bandwidth limitation in the DVR side
3. Group mode is used in the DVR networking setting. More mosaics in group mode, not recommended.
4. Masks or channel protection in DVR side
5. No rights for the user account
6. Bad DVR output

Q 15. Networking not stable

A : The possible causes:

1. Networking not stable
2. IP conflict
3. MAC conflict
4. LAN card error (PC/DVR)

Q 16. USB backup error

A : The possible causes:

1. CPU too busy to back up the data! Stop recording then backup!

2. Device not compatible
3. Backup device error

Q 17. DVR cannot be controlled by the keyboard

A : The possible causes:

1. DVR has wrong port setting
2. Wrong address
3. Low power for use; each adaptor need to be powered.
4. Transmission distance is too far

Q 18. Short recording time

A : The possible causes:

1. Bigger data rate from poor camera quality, dirty lens, backlight installation, bad aperture adjustment.
2. Small HDD storage
3. HDD damage

Q 19. Download files cannot be played back.

A : The possible causes:

1. No player
2. No graphic accelerator with DX8.1 or above
3. Save as AVI files and play with MEDIA PLAYER

Q 20. Forget the administrative password or internet password

A : The possible solution:

1. Please contact local customer service staff or call the customer service phone headquarters, we will guide you how to solve by the machine type and version of the program.

## 2. Maintenance

- Damped dust on the PCB board will cause a short circuit and will do something wrong to the DVR or damage it. For long-term stability of the DVR, regularly brush the circuit boards, connectors, fans and chassis to remove dust.
- Please ensure the project is well-grounded, so images, audio signal will not be disturbed. At the same time, we can protect the DVR from static or inductive voltage damage.
- Do not remove audio/video cables and RS-484 when the DVR is powered on, or they will be damaged.
- Do not use the TV interface in the DVR video output (TVOUT), or the DVR output circuit will be damaged easily.
- Keep the DVR away from heats and hot places.  
Keep the DVR chassis well-ventilated for better heat dissipation.
- Have regular checks and system maintenance

## G. Appendix : Specifications

Video	Input	BNC	8CH Input / BNC(1Vp-p 75Ω)
	Output	VGA Resolution	Yes
		High Definition(HD)	Yes
		CVBS	1
Audio	Input	4CH Input	
	Output	1CH Output	
	Audio Compression	G.711A	
Display	Resolution	5M	
	Digital Zoom	4X digital zoom	
	Auto Sequence Duration	1-60 sec	
Recording	Video Compression	H.265+	
	Resolution	Each Channel can individual setup for 8M/5M/4M/3M/1080P/720P/960H/D1	
	Frame	8CH 8M @8fps/CH 8CH 5M @10fps/CH; 8CH 4M @8fps/CH ; 8CH 3M @10fps/CH ; 8CH 1080P @15fps/CH ;	
	Recording Quality	Lowest, Low, Normal, High, Higher, Highest	
	Recording Mode	Continuous/ Schedule/ Motion / Manual	
	Motion Detection	Zones: 192(16×12 grid)	
	Display Mode	Single, Quad, 9-Split,Sequence	
Backup	File Format	Use defined format	
	Media Interface	USB/Network	
	Player Software Automatic backup	YES	
Network	Dual Stream	8M/5M/4M/3M/1080P/720P/960H/D1	
	Playback	YES	
	Communication Protocol	HTTP、DHCP、DDNS、NTP、SMTP、FTP、DNS、UPNP、PPPoE、IP Authority、IP Search	
	Browser	IE	
Storage	HDD	Interface	SATA
		Maximum support capacity	Maximum 6TB HDD
		Internal HDD	1 pcs
	File System	Stable and reliable self-developed file system	
	S.M.A.R.T	HDD error detecting	
User Interface	Menu Display	GUI interface ; VGA & HD & CVBS out simultaneously	
	Input Method	Front Panel / Mouse	
Serial Interface	PTZ & Controller	Pelco-D / Pelco-P ( RS-485)	
Netw	Ethernet	1*RJ-45, 10/100 Base-T	

ork	Web Monitoring	Live, Search/Playback, Backup, PTZ,
		Remote Setup/Upgrade
Featu res	Daylight Saving Time (DST)	Yes
	Internal Buzzer	Motion · Video Loss · HDD Error
	Multi Language	Yes (20 languages)
	Firmware Update	USB, Network Remote Upgrade
	Network Time Protocol (NTP)	Yes
	4G Mobile Phone	iPhone, Android, Mobile App supports Live video & audio, and playback.
	Intelligent Video Analytics	YES. Motion detection, removals, entry/exiting detection
	Central Management Software(CMS)	Yes
	Hybrid( Digital & Analogue)	Yes
Gener al	Operating Environment	Temperature -10 ~ 55°C, Humidity: 10~90%
	Power	DC 12V / 3A(AC100V~240V 50/60HZ)
	Weight	About 1.6kg ( without HDD and Power Adapter)
	Dimension	220mm x 288mm x 48mm (W x D x H)

★Product specifications are subject to change without notice; please contact us for the latest information.





Manufacturer :

**FUHO TECHNOLOGY CO., LTD.**

No. 30 Lane 726 Sec. 3 Jinma Rd., Changhua City

Phone: 886-4-751-2881 Fax: 886-4-751-6631

---