

Cloud Wearable Mobile Video Recorder

1 Channel H.264 FULL HD 1080P



Host

Body Camera



■ option ■ Functional option

Product Accessories

Please check every accessory we list below, make sure everything include in the product package before use. If you found any thing missing, please contact local distributor.

Note : The product set does not come with memory card, please purchase the memory card separately.

Standard Set

 
1. Host device, 1 meter camera cable
2. WiFi dongle
3. Waist bag
4. Quick start manual
5. CD

Optional

1. Power bank
2. 3G/4G Wireless network dongle
3. Bluetooth dongle
4. 8/16/32G/64G Class10 above SD card

H12A0E5500

Installation diagram

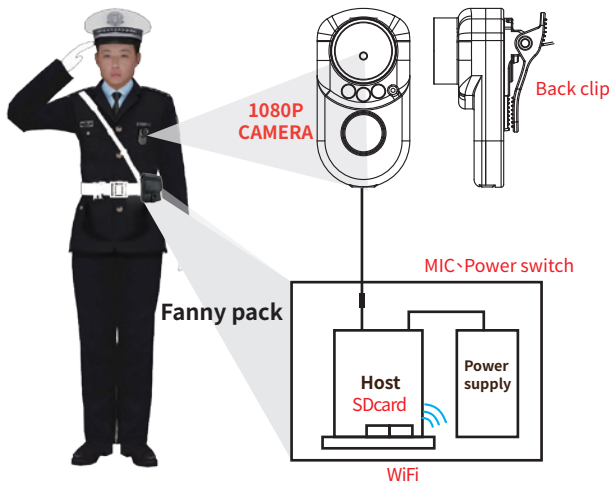

Installation Notes

- During installation, please put the host and mobile power pack inside the waist pack. The camera is equipped with multi-turn clamp, please install it in proper position as user's requirement.
- Do not use adapter card with Micro SD card. It is may lead to bad connection due to shock and vibration.
- GPS position time affected by install position, weather condition and so on.

Attention

- It is recommended put the device inside the waterproof waist pack, because the host dose not waterproof. Please ensure the waist pack cover is close after installation
- During the installation, please check the camera waterproof connector and power connector condition, prevent video error that caused by poor contact.
- Make sure the mobile power pack have enough power for avoid stop recording.
- Memory card may have compatibility issue due to manufacture process change or adjustment. This device does not guarantee can compatibility with all current memory cards. Change memory card mode if user meet the compatibility issue.
- Before using the memory disk, please format the disk first by using the software player in the CD-ROM. If not, device will automatically erase all data in the memory disk before recording.
- Memory card has limit lifespan, please regularly watch videos on PC and check the memory disk to ensure proper functioning.
- Collision and vibration may cause SD card defective and result intermittent recording, please check data and backup file periodically.
- When accident happen, please remove SD card and set it as write protection condition, for avoid record being over writing or tampering.
- For avoid power connect error, turn off device power before install or remove camera.

Appearance



Light signal

- **GPS(Green)**: Flashing means GPS is positioning, consistent green light means GPS positioned successfully.
- **REC(Red)**:
 1. Recording: Light flashing once per second
 2. Event trigger: the light flash rapidly.
 3. Do not insert SD card or use damage SD card: The light always on.
 4. Camera lost image input or image input error: The light always on.
 5. Light will flash rapidly during system update, after update success, the device will reboot and record video as normal.
- **WIFI(Blue)**:
 1. Blue light off: system does not detect, does not install USB WIFI Dongle, or the WiFi Dongle was damaged.
 2. Blue light flashing: System detected USB WIFI Dongle and waiting for connect with WiFi Dongle.
 3. Blue light on: success connect with WiFi

Touch button

1. Force recording: Device will trigger the forced recording by press once and then quickly release the force recording button, the red light blink rapidly, and light will back to normal flash frequency after the forced recording ends.
2. Light signal display (On/Off): press this button for 5 second, all light signal will turn off, and then press 5 second all the light signal on.
3. Reset device: press this button for 15 second; LED will turn off after 3 second. The device will be reset and record video as manufacture default setting.

Viewer




	Close		Speed
	Minimal		Volume Volume on / Mute/ Volume down /Volume up
	Playback		Playback controls Playback speed / Playback BAR / Backup start / Quick Backup
	Calendar	Play & Settings Icon Instruction	
	Backup		Pause
	Snapshot		play previous frame
	Configuration		Play next frame
	Format		Play previous file
	G-sensor		play backward
	Compass		Play next file

VACRON MOBI APP

VACRON MOTO
for IOS



 VACRONMOBI
FOR ANDROID

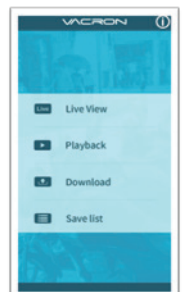

穿戴式雲端行動攝影機

1路 H.264 FULL HD 1080P



主機

穿戴式攝影機



■ 選配 ■ 功能性選擇

產品配件

使用之前，請先查看包裝內所提供的下列物品。如您發現物品不齊全，請聯絡您購買零售商。

※記憶卡並不隨機提供，請另外購買。

■ 標配

 
- (1) 主機+攝影機 線長約1米
- (2) WiFi dongle
- (3) 腰包
- (4) 簡易手冊
- (5) 產品光碟

■ 選配

- (1) 行動電源
- (2) 3G/4G 無線網路卡
- (3) 藍芽bluetooth 無線網路卡
- (4) 8/16/32G/64G Class10 以上 SD 卡

H12A0E5500

安裝示意圖

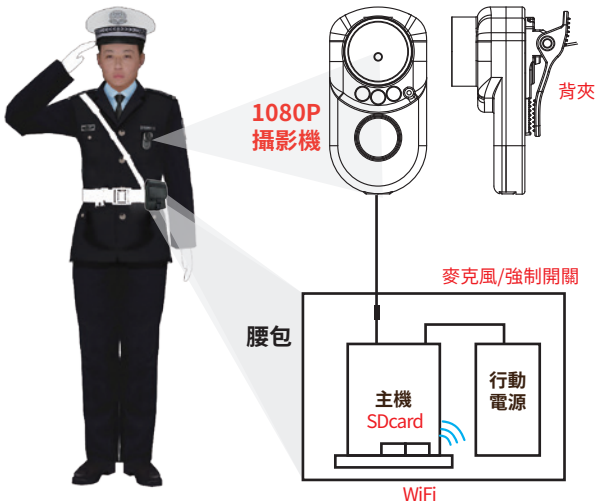

安裝說明

- (a) 安裝時請將主機與行動電源放於腰包內，攝影機附有多轉向背夾，請依需求安裝於適當位置。
- (b) 請勿使用 MicroSD 卡轉 SD 卡進行錄影，以免因震動導致轉接卡接觸不良而產生錄影異常。
- (c) GPS 定位時間會受到安裝位置、天候狀況...等因素影響。

安裝注意事項

- (a) 主機不防浸水建議安裝於腰包內，標配之腰包可防潑水，安裝後確實將腰包口蓋上。
- (b) 安裝時，請確認攝影機防水接頭與電源接頭是否都有接上，以免因接觸不良導致錄影異常。
- (c) 錄影前請確認行動電源是否有充足電量，避免因電量不足導致錄影中止。
- (d) 記憶卡可能因為廠商製程改變或調整，而出現相容性問題，本設備無法保證可以相容所有市售記憶卡。若有記憶卡相容性問題建議更換型號或廠牌。
- (e) 記憶卡若未先使用專用播放軟體進行格式化，則機器會將整張記憶卡內資料強制清除後，再以機器預設值開始錄影。特定機型未格式化可能不允許錄影。
- (f) 記憶卡有讀寫次數與壽命問題，建議定期檢查與使用電腦播放影像，確保記憶卡仍可正常讀寫。
- (g) 於撞擊及與高振動時，有可能會導致記憶卡磁區物理性損毀，導致播放斷斷續續或無法撥放問題，建議定期檢查與備份重要資料。
- (h) 當發生事故時，請將記憶卡取出並設定為防寫狀態，避免資料被修改或被覆蓋。
- (i) 安裝或移除攝影機前，必需先將電源關閉，以免造成電源異常或短路現象。

產品外觀



燈號/功能說明

燈號示意：

- GPS(綠燈)：綠燈閃爍表示GPS搜尋定位中，恆亮代表GPS定位成功。
- REC(紅燈)：
 - 1. 正常錄影時：燈號閃爍1秒亮，1秒滅
 - 2. 事件錄影觸發時：燈號會快速閃爍
 - 3. 未裝記憶卡或記憶卡損壞時：燈號會一直恆亮提醒告知
 - 4. 攝影機無影像輸入或是故障時：燈號也會一直恆亮提醒告知
 - 5. 程式更新中燈號會超快速閃爍，等待更新後會重開機，並恢復正常錄影
- WIFI(藍燈)：
 - 1. 燈號不亮時：表示未偵測到或未安裝 USB WIFI Dongle，也有可能是 WiFi Dongle 損壞。
 - 2. 燈號閃爍時：表示有偵測到USB WIFI Dongle並等待連線中。
 - 3. 燈號恆亮時：表示WIFI 連線成功。

觸控按鍵操作：

- 1. 強制錄影：單按一下後放開會觸發強制錄影，紅色燈會快速閃爍，強制錄影結束後會恢復正常錄影閃爍頻率。
- 2. 燈號顯示(開/關)：長按5秒後放開，全部燈號會熄滅，再長按5秒後放開，全部燈號會恢復正常閃爍。
- 3. 重置裝置：長按15秒後放開，大約3秒後LED燈號會全部熄滅，此時主機重置並恢復初始狀態，之後恢復正常錄影。

Viewer 介面



VACRON MOBI APP

VACRONMOBI FOR IOS



VACRONMOBI FOR ANDROID

