 


# SuperCapacitor Vehicle Video Recorder



OPTIONAL

 


Please contact your local dealer if you have any question on this product.

- Standard**
1. 5V cigarette Power adapter (miniUSB 3.5M)
  2. PHONE JACK 4 ports 90 deg turn to micro din with extra wire 2.5M
  3. Remote controller
  4. Product Disc
  5. Suction cup bracket
  6. Bracket holder
  7. Quick user guide

- Optional**
1. 8G/16G/32G/64G/128G \_Class 10 SD card
  2. External GPS Mouse(4P Phone Jack Connect)
  3. External 720P (AHD Interface)
  4. Extra wire for MIC(4P Phone Jack Connect)

## Product Diagram

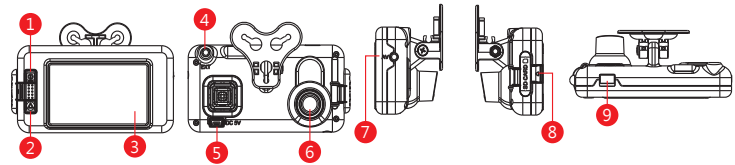

1. Monitor On/Off
2. Force recording
3. Screen
4. AV output/  
GPS Mouse extra slot(optional)/  
Extra wire for MIC(optional)
5. DCSV Power input
6. CH1 1080P Lens
7. CH2 External camera plug
8. SD card Slot
9. USB cover Reserved for USB PC Link

## Safety Precautions

Please Take and review some testing videos initially to make sure the images were recorded correctly.

Please note that manufacturer, its subsidiaries and affiliates, and its distributors are not liable for consequential damages arising from any malfunction of main device accessory, including memory device that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

Before using the product, please ensure that you read the safety precautions described below. Always ensure that the product is used correctly.

- Use only recommended power sources.
- Do not attempt to disassemble, alter or apply heat to the product.
- DO not apply multi cigarette lighter adapters-Applying such devices will cause unstable power input to damage the vehicle video recorder.
- Please always make sure all power connectors are fully secured.
- Avoid dropping or subjecting the product to severe impacts.
- To avoid the risk of injury, do not touch the interior of the product if it has been dropped or otherwise damaged.
- Stop using the product immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.
- Do not use organic solvents such as alcohol, benzene, or thinner to clean the product.
- Do not let the product come into contact with water (e.g. sea water) or other liquids.
- Do not allow liquids or foreign objects to enter the VVR.
- Do not place the VVR near or in direct flame.
- Do not handle the power cord with wet hands.
- Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories.
- Do not use if the power cord or plug are damaged, or not fully plugged into the outlet.
- Do not allow dirt or metal objects (such as pins or keys) to contact the terminals or plug.
- Avoid using, placing or storing the product in the humid or dusty areas.



For More Information  
Please check VACRON Website  
<http://www.vacron.com>  
Made in Taiwan  
Copyright@ FUHO Technology CO., LTD.

2016 DEC. V1.0  
H11A0N3900

## Installation Guide

1. Select suction-cups or stick-holder type bracket.
2. Find the optimal position of device on the windshield.
3. Adjust the view angle properly.
4. Plug in the DCSV power supply.
5. Plug in the cigarette charger.
6. VVR Installation.

**Notice**

- (1) This device should be installed in the area where the windshield will be able to be cleaned.
- (2) Formatting SD card on the device before beginning to use.
- (3) Set time zone and timing on OSD, or auto-calibrating by GPS.
- (4) NTSC or PAL setting through OSD.
- (5) Electricity consumption: 500mA. If power supplied by PC, please use Y Type USB Cable.

## OSD Menu

## SD Card Installation

1. Open SD card cover on the device to insert or remove SD card.
2. When not using SD card, please close the cover to avoid dust or other items get into device.
3. SD card Format / SD card Restore.

- Notice**
- (1). Recommend Memory Card class 10 or above (Minimum of 8GB)
  - (2). If SD card did not format by Player before using, device will delete all data inside and format it automatically (take 1~5mins). After it's done will start to record.
  - (3). Please do not convert Micro SD to SD card to begin recording, to avoid the damage during recording.
  - (4). Since memory cards have the writing endurance situation, we recommend to inspect the memory card and use pc for playback regularly, to ensure that the memory card can read and write.
  - (5). Some brand of SD card might not suit for device, if it is not working please change other brand SD card or Class.
  - (6). If SD card did not format by player, device will delete all data and setup automatically. Some devices will not be able to record if SD card is not format.
  - (7). SD card 8G · 16G · 32G · 64G or 128G, after format by Player. The space will only show up for 80MB rest of memory space will be displayed by Player only.
  - (8). Please backup data from SD card regularly. Avoid losing data.
  - (9). When event happened, please take SD card out and lock it. To avoid overwrite.

## VACRON Player



Please go to VACRON Website to download vacron viewer

\*Reminder- DirectX 9.0 is required.

## Remote Controller

- ?** How to check if the remote controller is workable?
- Check the mercury cell is installed in correct direction. (Check the pole)
  - Check if the cell power is exhaust.
  - Check if the sensor is covered.
  - Check if it nears by Fluorescent Lamp.

 
 
## External Camera (optional)

### Installation diagram

To stall External Camera with 4P Phone Jack Connect (1 Vp-p Composite Video Output) in front or rear of the car.

**Note:** To avoid camera damage, please power off the vehicle video recorder before plug the camera in.

### Definition of 4P Phone Jack connect

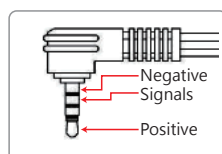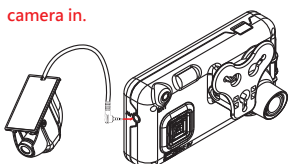


## Recording & Stop Recording

1. Power on / Record  
Turn on device and wait for around 20 sec ready for recorded.
2. Power off / Stop record  
After power off, wait for superconductor's supply is off, when the power are all off. Take out SD card for backup or format.

# 金電容 行車影音記錄器



 ■ 選配




使用之前，請先查看包裝內所提供的下列物品。如您發現物品不齊全，請聯絡您購買的經銷商。

- 標配**
1. 點菸頭變壓器轉5V (miniUSB 線材3.5米)
  2. PHONE JACK 公頭4極 90度 轉寶馬頭公 延長線 2.5M
  3. 遙控器
  4. 產品光碟
  5. 支架吸盤
  6. 支架固定架
  7. 簡易說明書

- 選配**
1. 8G/16G/32G/64G/128G\_Class 10 SD卡
  2. 外接式GPS Mouse(4接點耳機座4P Phone Jack Connect)
  3. 外接式車用攝影機720P (AHD Interface)
  4. 外接延長MIC(4接點耳機座4P Phone Jack Connect)

## 產品外觀

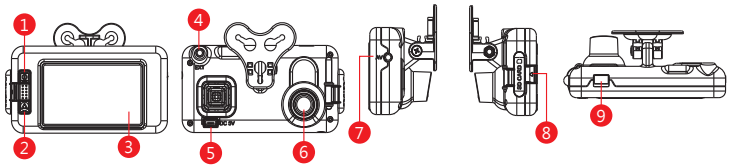 

1. 螢幕電源開關
2. 手動強制錄影鍵
3. 螢幕
4. AV端子影像輸出/ GPS Mouse擴充外孔(選配)/ 外接延長MIC(選配)
5. 電源DC5V
6. CH1 1080P鏡頭
7. CH2外接鏡頭插座
8. 記憶卡插槽
9. USB防塵蓋 / USB PC Link

## 安全注意事項

請先試錄影片，然後播放，以確定機器操作正常。請注意，如因本機配件，包括記憶卡的故障，導致不能拍攝影像或不能讀取影像格式而引起的任何損失，本公司、其附屬機構及經銷商皆不負賠償責任。

使用本產品之前，請確定您已閱讀下列的安全注意事項，並請確定您操作產品的方法是正確的。

- 請存放本器材於兒童與嬰兒無法觸碰的地方。
- 請只使用建議的電源。
- 請勿使用外接式(多孔)點菸器，避免因點菸器電壓不穩導致產品當機、失去電力而無法錄影。
- 點菸頭電源與本產品電源頭，請務必“密合緊實”。
- 請勿嘗試將產品拆開、改裝或加熱。
- 避免使產品丟落地上或受猛烈撞擊。
- 要避免受傷，請勿在產品跌下後或損毀時觸碰產品的內部。
- 如產品冒煙、發出異味或有其他異常，請立刻停止操作產品。
- 請勿使用有機溶劑，如酒精、苯或油漆稀釋劑清潔產品。
- 請勿讓產品接觸到水(如海水)或其他液體。
- 請勿讓任何液體或異物進入機器。
- 請避免端子或插頭接觸到金屬物件(如針或鑰匙)或污漬。
- 請避免在潮濕或多塵的地方使用、放置或存放產品。



更多產品資訊，請上VACRON官網  
<http://www.vacron.com.tw>

製造產地: 台灣  
馥鴻科技股份有限公司

2016 DEC. V1.0  
H11A0N3900

## 汽車安裝步驟示意圖

1. 使用「吸盤式」或「貼架式」連結主機至汽車前擋風玻璃上。
2. 安裝主機於最適位置。
3. 調整錄影視野角度於最佳位置。
4. 將電源插入DC5V連接孔。
5. 將變壓器插入點菸器位置。
6. 行車記錄器連結示意圖。

**注意事項**

 
- (1) 機器安裝時，需安裝在雨刷可以清洗到的區域。
- (2) 第一次在本機端使用的記憶卡時，請先在本機端格式化。
- (3) 時間設定請在OSD設定頁調整時間，或是由PLAYER設定時區後由GPS校正時間，影像檔案才可以顯示正常時間。
- (4) 機器本身有區分NTSC機種或PAL機種。
- (5) 機器耗電流超過標準USB單孔輸出500mA，因此連接電腦供電時，需確認電腦USB輸出有5V/1A。

## 外接式攝影機安裝示意圖 (選配)

■ 外接式攝影機安裝示意圖  
可選用PHONE JACK-4P 3.5mm 外接攝影機(1 Vp-p Composite Video Output) 安裝於車前或車後。

備註：安裝時請務必將電源供電關閉，以免造成攝影機損壞。

■ 4P Phone Jack攝影機接點定義

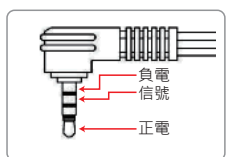

## OSD 選單



**記憶卡** \*記憶卡並不隨機提供，請另外購買。

1. 將記憶卡防塵護蓋往下滑開，即可安裝/取下記憶卡。
2. 未使用記憶卡時，請將防塵護蓋關上，可隔離異物灰塵或是其他可能造成SD記憶卡異常之產生。

3. 格式化記憶卡 / 還原記憶卡，請參考說明書。

- 注意事項**
- (1) 記憶卡建議使用class 10以上 SDHC card(需使用8G以上，非轉接卡)
  - (2) 記憶卡若未先使用專用播放軟體進行格式化，則機器會將整張記憶卡資料強制清除後(時間與容量有關約1~5分鐘不等)，再以機器預設值開始錄影。
  - (3) 請勿使用MicroSD卡轉SD卡進行錄影，以免因震動導致轉接卡接觸不良而產生錄影異常。
  - (4) 記憶卡有讀寫次數與壽命問題，建議定期檢查與使用電腦播放影像，確保記憶卡仍可正常讀寫。
  - (5) 記憶卡可能因為廠商製程改變或調整，而出現相容性問題，本設備無法保證可以相容所有市售記憶卡。若有記憶卡相容性問題建議更換型號或廠牌。
  - (6) 記憶卡若未先使用專用播放軟體進行格式化，則機器會將整張記憶卡內資料強制清除後，再以機器預設值開始錄影。特定機型未格式化可能不允許錄影。
  - (7) SD卡無論8G、16G、32G、64G或128G，經過本機或播放器格式化後，於電腦所看到的儲存空間只有80MB，其餘為暗檔格式，必須透過播放器才能看到檔案。
  - (8) 於撞擊及與高振動時，有可能會導致記憶卡磁區物理性損毀，導致播放斷斷續續或無法撥放問題，建議定期檢查與備份重要資料。
  - (9) 當發生事故時，請將記憶卡取出並設定為防寫狀態，避免資料被修改或被覆寫。

## VACRON 播放器

 


請至VACRON官網下載最新播放器。  
\*要執行此軟體須安裝 DirectX 9.0 以上。  
支援作業系統：WINDOWS XP、VISTA、7、8、10，不支援MAC OS。  
建議的硬體需求：i5以上等級 3.1GHZ，RAM:4G以上、有獨立顯示卡更佳

## 錄影及停止錄影

1. 開機/錄影  
電源啟動，並等待約20秒鐘後，即開機完成，即表示開始錄影。
2. 開機/停止錄影  
電源關閉，待金電容延遲斷電後即停止錄影，此時可取下記憶卡讀取所攝錄之檔案。

## 遙控器

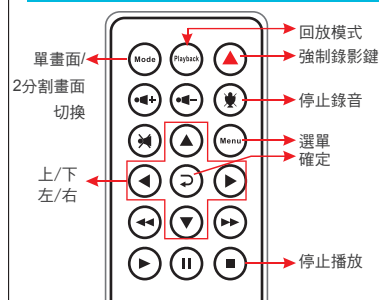

- 遙控器異常檢查**
- ☑ 檢查電池的正負極性
  - ☑ 檢查電池電量是否用完
  - ☑ 檢查遙控感測器是否被遮住
  - ☑ 檢查附近是否有螢光燈正在使用